












# VR CARDINAL

## BUTTON FUNCTIONS TABLE

BUTTON	BOOK READING / MEDIA PLAYBACK	GPS – ORIENTATION
<b>Power button</b> 	Press and hold power on / off, tap to toggle control of speed/tone/volume	Press and hold power on / off, tap to toggle control of speed/tone/volume
<b>Go To</b> 	Go to page / time / search	Single tap to go to landmark, press and hold to go to route
<b>Online</b> 	Toggle among offline and online bookshelves and orientation mode	Toggle among offline and online bookshelves and orientation mode
<b>Bookmark</b> 	Bookmark functions, press and hold to insert bookmark	Single tap to record landmark, press and hold to create route
<b>1</b>	Bookshelf, press and hold to enter user guide	Press and hold to enter user guide
<b>2</b>	Up arrow when available	
<b>3</b>	Item functions (delete, move, etc.)	Certain shortcuts for landmarks such as delete / rename
<b>4</b>	Previous item in a list	Left arrow, press and hold for indoor route preview
<b>5</b>	Where am I	Where am I, press and hold for what's around
<b>6</b>	Next item in a list	Right arrow, press and hold to lock open area. When on a route, press and hold for indoor route preview
<b>7</b>	Settings menu, press and hold to change voice	Settings menu, press and hold to change voice
<b>8</b>	Down arrow when available	
<b>9</b>	Toggle playback mode when available	Press and hold to enable backtrack
<b>*</b>	Cancel, press and hold to lock	Cancel, press and hold to lock
<b>0</b>	Information menu, press and hold for key describer	Information menu, press and hold for key describer
<b>#</b>	Confirm, press and hold for power and download status	Confirm, press and hold for power and download status
<b>Sleep</b> 	Clock / sleep timer, press and hold to set time and date	Clock / sleep timer, press and hold to set time and date
<b>Rewind</b> 	Short rewind, press and hold to rewind by interval	Left arrow, press and hold for indoor route preview
<b>Play</b> 	Play / Stop	Repeat / Stop
<b>Fast forward</b> 	Short fast forward, press and hold to fast forward by interval	Right arrow, press and hold to lock open area. When on a route, press and hold for indoor route preview
<b>Record button</b> 	Record note	Single tap to record a landmark, press and hold to create a route
<b>Volume up arrow</b> 	Increase volume, speed or tone, depending on user's setting by tapping the power button	Increase volume, speed or tone, depending on user's setting by tapping the power button
<b>Volume down arrow</b> 	Decrease volume, speed or tone, depending on user's setting by tapping the power button	Decrease volume, speed or tone, depending on user's setting by tapping the power button